

# Contents



## 1. General Notices for Safety

|   |      |
|---|------|
| <b>1-1. Before using the tractor</b> .....  | 1-1  |
| <b>1-2. Safety Precautions (Read this for safety before using)</b>                    |      |
| (1) Notices before using .....  | 1-3  |
| (2) Notices when starting Engine .....  | 1-5  |
| (3) Notices while operating/using the tractor .....                                   | 1-6  |
| (4) Notices when connecting Implement .....   | 1-8  |
| (5) Notices when towing the tractor .....   | 1-8  |
| (6) Notices when transporting the tractor .....                                       | 1-9  |
| (7) Notices when parking tractor .....  | 1-9  |
| (8) Notices when checking tractor after work .....                                    | 1-10 |
| (9) Notices when handling Diesel Fuel .....   | 1-11 |
| (10) Operator Protective Structure (OPS) .....  | 1-11 |
| <b>1-3. Long-term storage</b>   |      |
| (1) Preparation for storage .....   | 1-12 |
| (2) Check & Maintenance during storage .....  | 1-13 |
| (3) Preparation for Reuse .....   | 1-13 |
| <b>1-4. Notices for “Use &amp; Disposal” related to Environment Preservation</b> .. . | 1-14 |
| <b>1-5. Symbols</b> .....   | 1-15 |
| <b>1-6. Safety Decals</b>   |      |
| (1) Handling and Maintenance of Safety Decals .....                                   | 1-16 |
| (2) Safety Decals and attaching position .....  | 1-16 |



## 2. The Name of Each Part

|                      |     |
|----------------------|-----|
| (1) Frame Type ..... | 2-1 |
|----------------------|-----|



## 3. Instruments and Controls

### 3-1. Instrument Panel and Switches

|  |     |
|--|-----|
| (1) The name of each part .....            | 3-1 |
| (2) Key switch .....                       | 3-1 |
| (3) Cold start aid indicator .....         | 3-1 |
| (4) Tachometer and Hour meter .....        | 3-2 |
| (5) Engine coolant temperature gauge ..... | 3-2 |
| (6) Fuel level gauge .....                 | 3-2 |
| (7) Turn signal light switch .....         | 3-3 |
| (8) Engine oil pressure indicator .....    | 3-3 |

# Contents

|  |     |
|--|-----|
| (9) Battery charging indicator           | 3-3 |
| (10) Fuel filter warning indicator       | 3-3 |
| (11) Light switch                        | 3-4 |
| (12) Horn switch                         | 3-4 |
| (13) Hazard warning light switch         | 3-4 |
| (14) Work light switch                   | 3-5 |
| (15) Cruise control indicator (HST type) | 3-5 |
| (16) Cruise control switch (HST type)    | 3-5 |
| (17) PTO operation indicator             | 3-6 |
| (18) PTO switch                          | 3-6 |
| (19) Parking brake indicator             | 3-6 |

## **3-2. Operating Levers and Pedals**

|  |      |
|--|------|
| (1) Shuttle lever                          | 3-8  |
| (2) Throttle lever                         | 3-8  |
| (3) Throttle pedal                         | 3-8  |
| (4) Clutch pedal                           | 3-9  |
| (5) Brake pedal                            | 3-9  |
| (6) Parking brake lever                    | 3-10 |
| (7) Main gear shift lever                  | 3-10 |
| (8) Range gear shift lever                 | 3-10 |
| (9) PTO gear lever (if fitted)             | 3-11 |
| (10) 4WD lever                             | 3-11 |
| (11) Differential lock pedal               | 3-12 |
| (12) HST forward/ reverse pedal (HST type) | 3-12 |
| (13) HST neutral switch                    | 3-13 |
| (14) Driver's seat (HST type)              | 3-13 |
| (15) Seat adjustment                       | 3-14 |
| (16) Tilt steering wheel                   | 3-14 |

## **3-3. Hydraulic System**

|  |      |
|--|------|
| (1) Steering                               | 3-15 |
| (2) Hydraulic lift Control                 | 3-15 |
| (3) Down speed control knob                | 3-17 |
| (4) Remote control lever and Quick coupler | 3-17 |
| (5) Joystick lever (option)                | 3-18 |
| (6) Hydraulic System Diagram               | 3-19 |

## **3-4. Safety Device**

|   |      |
|---|------|
| (1) Seat belt                             | 3-21 |
| (2) Foldable Safety frame (R.O.P.S. type) | 3-21 |

# Contents



## 4. Operation and Work

### 4-1. Engine start and stop

- (1) Engine start ..... 4-1
- (2) Start in cold weather ..... 4-3
- (3) Engine stop ..... 4-3

### 4-2. How to Drive and how to Stop

- (1) How to drive ..... 4-4
- (2) Changing speed ..... 4-6
- (3) Emergency Stop ..... 4-7
- (4) Stopping tractor ..... 4-8
- (5) Driving tractor on the road ..... 4-9
- (6) Parking ..... 4-10

### 4-3. How to handle new tractor

- (1) Check points ..... 4-11
- (2) Notices in handling new Tractor ..... 4-11

### 4-4. Attaching Implement

- (1) 3-point linkage ..... 4-12
- (2) Upper link installation and adjustment ..... 4-13
- (3) Adjustment of Lift rod's length (Left/ Right) ..... 4-13
- (4) Adjustment of Stabilizer's length ..... 4-13
- (5) Reference of Implement installation part ..... 4-14
- (6) Reference of PTO shaft ..... 4-15
- (7) PTO Safety cover and protection cap ..... 4-15
- (8) Hitch and Drawbar ..... 4-16
- (9) 7-Pole connector (option) ..... 4-17
- (10) Technically maximum permissible mass ..... 4-18
- (11) Adjusting Wheel tracks and tire replacement ..... 4-19
- (12) Tires and Load capacity ..... 4-20
- (13) Adjusting Steering angle ..... 4-21

### 4-5. Driving Speed ..... 4-22



## 5. Lubrication and Maintenance

### 5-1. Checking of Each Part

- (1) Checking Parts ..... 5-1
- (2) Maintenance Table ..... 5-3

### 5-2. Lubricants and Capacity ..... 5-5

### 5-3. Access for maintenance ..... 5-6

### 5-4. First 50 hour check ..... 5-6

# Contents

## **5-5. Checking Before Starting (Daily check)**

|   |      |
|---|------|
| (1) Engine oil                                      | 5-7  |
| (2) Fuel tank                                       | 5-8  |
| (3) Instrument panel & Indicators                   | 5-8  |
| (4) Turn signal lights, Lights, Horn                | 5-9  |
| (5) Engine coolant                                  | 5-9  |
| (6) Air cleaner (Dry type)                          | 5-10 |
| (7) Cleaning of Radiator and Radiator screen        | 5-11 |
| (8) Tires air pressure and damage                   | 5-11 |
| (9) Tightening state of Bolts and Nuts of each part | 5-12 |
| (10) Adjustment of Clutch pedal play                | 5-12 |
| (11) Adjusting HST control linkage (HST type)       | 5-13 |
| (12) Adjustment of Brake pedal play                 | 5-14 |

## **5-6. Every 50 hour check**

|  |      |
|--|------|
| (1) Lubricating grease nipple                | 5-15 |
| (2) Checking Transmission oil                | 5-16 |
| (3) Checking Front axle oil                  | 5-16 |
| (4) Battery check                            | 5-16 |
| (5) Air cleaner (Dry type)                   | 5-16 |
| (6) Cleaning of Radiator and Radiator screen | 5-16 |

## **5-7. Every 300 hour check**

|  |      |
|--|------|
| (1) Replacing Engine oil and Filter          | 5-17 |
| (2) Replacing Hydraulic oil Filter           | 5-18 |
| (3) Replacing Fuel filter cartridge          | 5-19 |
| (4) Replacing Air cleaner element (Dry type) | 5-19 |
| (5) Tension adjustment of Fan belt           | 5-20 |
| (6) Toe-in                                   | 5-20 |

## **5-8. Every 600 hour check**

|  |      |
|--|------|
| (1) Changing Front axle oil            | 5-21 |
| (2) Changing Transmission oil          | 5-21 |
| (3) Replacement of Engine Coolant      | 5-22 |
| (4) Adjusting Engine Valve clearance   | 5-23 |
| (5) Checking Nozzle injection pressure | 5-23 |

## **5-9. General maintenance (When required)**

|                                   |      |
|-----------------------------------|------|
| (1) Air-bleeding from Fuel system | 5-24 |
| (2) Fuse & Main fuse              | 5-25 |
| (2) Battery handling and Notices  | 5-27 |

## **5-10. Troubleshooting**



## **6. Dimension and Specification**

6-1