

Contents



1. General Notices for Safety

| | |
|---|------|
| 1-1. Before using the tractor | 1-1 |
| 1-2. Safety Precautions (Read this for safety before using) | |
| (1) Notices before using | 1-3 |
| (2) Notices when starting Engine | 1-5 |
| (3) Notices while operating/using the tractor | 1-6 |
| (4) Notices when connecting Implement | 1-8 |
| (5) Notices when towing the tractor | 1-8 |
| (6) Notices when transporting the tractor | 1-9 |
| (7) Notices when parking tractor | 1-9 |
| (8) Notices when checking tractor after work | 1-10 |
| (9) Notices when handling Diesel Fuel | 1-11 |
| (10) Operator Protective Structure (OPS) | 1-11 |
| 1-3. Long-term storage | |
| (1) Preparation for storage | 1-12 |
| (2) Check & Maintenance during storage | 1-13 |
| (3) Preparation for Reuse | 1-13 |
| 1-4. Notices for “Use & Disposal” related to Environment Preservation .. | 1-14 |
| 1-5. Symbols | 1-15 |
| 1-6. Safety Decals | |
| (1) Handling and Maintenance of Safety Decals | 1-16 |
| (2) Safety Decals and attaching position | 1-16 |



2. The Name of Each Part

| | |
|----------------------|-----|
| (1) Frame Type | 2-1 |
|----------------------|-----|



3. Instruments and Controls

3-1. Instrument Panel and Switches

| | |
|--|-----|
| (1) The name of each part | 3-1 |
| (2) Key switch | 3-1 |
| (3) Cold start aid indicator | 3-1 |
| (4) Tachometer and Hour meter | 3-2 |
| (5) Engine coolant temperature gauge | 3-2 |
| (6) Fuel level gauge | 3-2 |
| (7) Turn signal light switch | 3-3 |
| (8) Engine oil pressure indicator | 3-3 |

Contents

| | |
|------------------------------------|-----|
| (9) Battery charging indicator | 3-3 |
| (10) Fuel filter warning indicator | 3-3 |
| (11) Light switch | 3-4 |
| (12) Horn switch | 3-4 |
| (13) Hazard warning light switch | 3-4 |
| (14) Work light switch | 3-5 |
| (15) Parking brake indicator | 3-5 |

3-2. Operating Levers and Pedals

| | |
|--------------------------------|------|
| (1) Shuttle lever | 3-7 |
| (2) Throttle lever | 3-7 |
| (3) Throttle pedal | 3-7 |
| (4) Clutch pedal | 3-8 |
| (5) Brake pedal | 3-8 |
| (6) Parking brake lever | 3-9 |
| (7) Main gear shift lever | 3-9 |
| (8) Range gear shift lever | 3-9 |
| (9) PTO gear lever (if fitted) | 3-10 |
| (10) 4WD lever | 3-10 |
| (11) Differential lock pedal | 3-11 |
| (12) Mid. PTO lever (option) | 3-11 |
| (13) Seat adjustment lever | 3-12 |

3-3. Hydraulic System

| | |
|--|------|
| (1) Steering system | 3-13 |
| (2) Hydraulic Lift Controls | 3-13 |
| (3) Down speed control knob | 3-14 |
| (4) Remote control lever and Quick coupler | 3-15 |
| (5) Hydraulic System Diagram | 3-16 |

3-4. Safety Device

| | |
|---|------|
| (1) Seat belt | 3-17 |
| (2) Foldable Safety frame (R.O.P.S. type) | 3-17 |

4. Operation and Work

4-1. Engine start and stop

| | |
|---------------------------|-----|
| (1) Engine start | 4-1 |
| (2) Start in cold weather | 4-2 |
| (3) Engine stop | 4-2 |

Contents

4-2. How to Drive and how to Stop

- (1) How to drive 4-3
- (2) Changing speed 4-4
- (3) Emergency Stop 4-4
- (4) Stopping tractor 4-4
- (5) Driving tractor on the road 4-5
- (6) Parking 4-6

4-3. How to handle new tractor

- (1) Check points 4-7
- (2) Notices in handling new Tractor 4-7

4-4. Attaching Implement

- (1) 3-point linkage 4-8
- (2) Upper link installation and adjustment 4-9
- (3) Adjustment of Lift rod's length (Left/ Right) 4-9
- (4) Adjustment of Stabilizer's length 4-9
- (5) Reference of Implement installation part 4-10
- (6) Reference of PTO shaft 4-10
- (7) PTO Safety cover and protection cap 4-11
- (8) Hitch and Drawbar 4-11
- (9) 7-Pole connector (option) 4-12
- (10) Technically maximum permissible mass 4-13
- (11) Adjusting Wheel tracks 4-14
- (12) Tires and Load capacity 4-15
- (13) Adjusting Steering angle 4-15

4-5. Driving Speed 4-16

5. Lubrication and Maintenance

5-1. Checking of Each Part

- (1) Checking Parts 5-1
- (2) Maintenance Table 5-2

5-2. Lubricants and Capacity 5-3

5-3. Access for maintenance 5-4

5-4. First 50 hour check 5-4

5-5. Check before Starting (Daily check)

- (1) Engine oil 5-5
- (2) Fuel tank 5-6
- (3) Instrument panel & Indicators 5-6

Contents

| | |
|---|------|
| (4) Turn signal lights, Lights and Horn | 5-7 |
| (5) Engine coolant | 5-7 |
| (6) Air cleaner (Dry type) | 5-8 |
| (7) Cleaning of Radiator and Radiator screen | 5-9 |
| (8) Tire air pressure and damage | 5-9 |
| (9) Tightening state of Bolts and Nuts of each part | 5-10 |
| (10) Adjustment of Clutch pedal play | 5-10 |
| (11) Adjustment of Brake pedal play | 5-11 |
| 5-6. First 50 hour check | |
| (1) Lubricating grease nipple | 5-12 |
| (2) Checking Transmission oil | 5-12 |
| (3) Checking Front axle oil | 5-13 |
| (4) Battery check | 5-13 |
| (5) Air cleaner (Dry type) | 5-13 |
| (6) Cleaning of Radiator and Radiator screen | 5-13 |
| 5-7. Every 300 hour check | |
| (1) Replacing Engine oil and Filter | 5-14 |
| (2) Replacing Hydraulic oil filter | 5-15 |
| (3) Replacing Fuel filter cartridge | 5-15 |
| (4) Replacing Air cleaner element | 5-16 |
| (5) Tension adjustment of Fan belt | 5-16 |
| (6) Toe-in | 5-17 |
| 5-8. Every 600 hour check | |
| (1) Changing Front axle oil | 5-18 |
| (2) Changing Transmission oil | 5-18 |
| (3) Replacement of Engine coolant | 5-19 |
| (4) Adjusting Engine Valve clearance | 5-20 |
| (5) Checking Nozzle injection pressure | 5-20 |
| 5-9. General maintenance (When required) | |
| (1) Air-bleeding from Fuel system | 5-21 |
| (2) Fuse & Main fuse | 5-22 |
| (3) Battery handling and Notices | 5-24 |
| 5-10. Troubleshooting | 5-28 |



| | |
|--------------------------------|-----|
| 6. Dimension and Specification | 6-1 |
|--------------------------------|-----|